

GearFit2Pro(SM-R365) LDU Setup Guide

Contents

- 1. Notice**
- 2. Overview**
- 3. Set-up**
- 4. RetailMode application manual**

Notice

Notice


1. Keep Wi-Fi connection for S/W update.
2. ScreenSaver does not play under 30% of battery level

Overview

Overview : Gear Fit 2 Pro LDU

Gear Fit 2 Pro Live Demo Unit operates as a standalone device.

Without connection with a phone, customer can experience various features of Gear Fit 2 Pro.

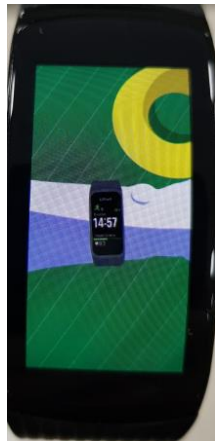

Screensaver Play*

※ Screensaver does not play under 30 percent of battery level

→
Touch the Screen
or
Press any Button



Watchface

Product Layout



Back Key

Power/Home Key

Set-up

Set-up : Out of the Box

1. To turn on the device, press and hold the **Power/Home** button. Then, Booting logo is coming.
2. To set the language, scroll and select your language then touch **Next** button.
3. To set date, touch and spin the wheel then touch **Next** button.
4. To set time, touch and spin the wheel then touch **Next** button.

Date and Time should be set correctly for normal operation of your Fit 2 pro



Set-up : Out of the Box

5. Turn on Wi-Fi, Gear Fit2Pro scans Wi-Fi AP. Please wait for a minute.
6. Connect to Wi-Fi AP to get S/W update. (If you don't have available AP, press Back button)
7. To skip the tutorial, press <Skip> button on Gear Fit 2 Pro
8. Done.



(1) To check S/W version

: Press Home/Power Key → Settings → Gear info → About device → Software version

(2) To update S/W, please follow below steps.




- ① WiFi connection: Press Home/Power Key → Settings → Connections → Wi-Fi → Wi-Fi networks → Connect to available AP
- ② FOTA upgrade : After Wi-Fi connected → Settings → Gear info → Update Gear software

RetailMode application manual

Retail Mode application manual

You can configure [Screen timeout duration](#), [Playtime schedule](#), [Language](#), [Date and time](#), [Auto reset period](#), [Service enable/disable](#) and do [Factory reset](#) in RetailMode application.

1. To enter the apps, press [Power/Home](#) key.
2. Run Retail Mode application.
3. Enter password ([5444](#))
4. Menu will show

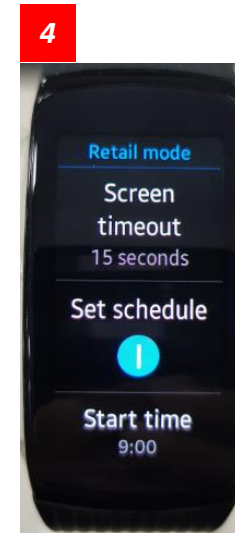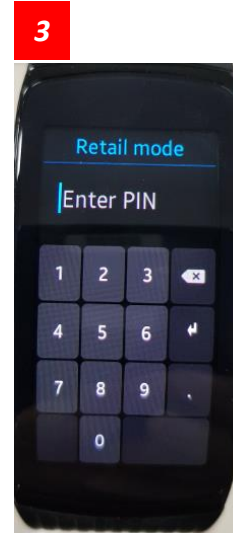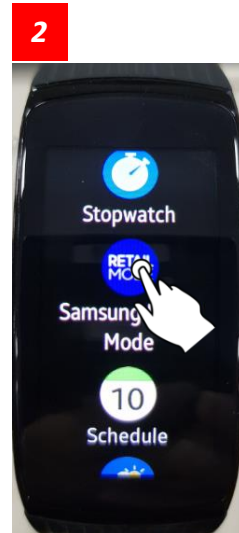

Retail Mode application manual

(1) Screen timeout

You can change Screen timeout duration from 15 sec to 1 min.

Screensaver will be played after configured duration of inactivity. (default: 15 sec)

(2) Set schedule(Start time / End time)

You can set Playtime schedule.

When you set Playtime schedule, Screensaver plays between setted start time and setted end time. (default: 9:00 to 22:00)

(3) Language

You can change Language. System language will be changed.

(4) Date and time

You can set Date and time.

(5) Auto reset

You can change Auto reset period from 1 minute to 3 hours.

Restore all settings and customer created content in every Auto reset period. (default: 10 minutes).

Retail Mode application manual

(6) Service enable

You can deactivate RetailMode Service.

If you deactivate RetailMode service, Screensaver doesn't play until you reactivate RetailMode service.

(Password: M729Q16K8546)

(8) Factory reset

You can do the Factory reset.

If you have an unidentified device malfunction, proceed the Factory reset. (Password: M729Q16K8546)

(9) Video clip

You can change Screen Saver video to Global / US version. (default : Global)

Do not change this option except US.

(10) UA(Under Armour)App

You can enable UA demo application for Fit 2 Pro Live Demo Unit (default : Disable)

Do not enable this menu if your country does not service UA app 0for Gear Fit 2 Pro.

(11) Speedo App

You can enable Speedo demo application for Fit 2 Pro Live Demo Unit (default : Disable)

Do not enable this menu if your country does not service UA app 0for Gear Fit 2 Pro.

END

If you have any question, please contact to below address.

- Sungho Jeon (sungho.jeon@samsung.com)
- Minho Lee (minhossi.lee@samsung.com)
- Jeongmin Oh (jenny_jm.oh@samsung.com)